


TOUCH PEN USER MANUAL

1. Function for pen



2. To change batteries

Turn top-barrel and mid-barrel counter clockwise to separate them, then change batteries. The type of batteries is AG3/LR41, and there are 3pcs in the pen. Please take care of anode/cathode.

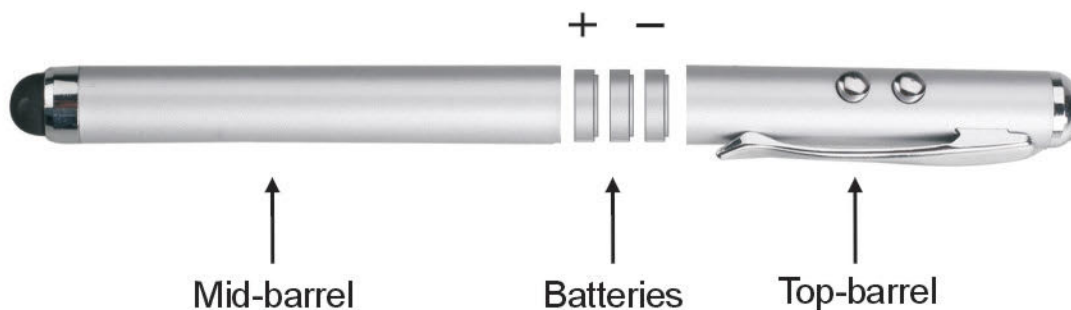

3, For laser pointer and LED light press on the appropriated key on the top barrel.

